


UHF Audiolink Transmitter C 7203C to suit C 7202C

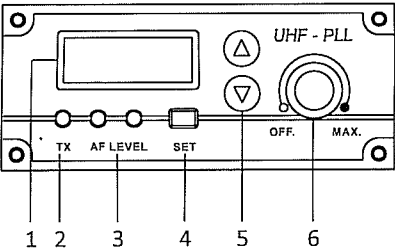

- 1. LCD Window
- 2. TX Indicator
- 3. AF indicator
- 4. Frequency SET
- 5. UP / DOWN
- 6. Power/ Volume Knob

Operation

ON / OFF

Switch on the main power switch and clockwise the power Volume knob, LCD Window and TX indicator lights on (2), LCD screen display channel number within 1-2 seconds. In ON mode, switch the power off and anti-clockwise the volume knob, window shows OFF within 2-3 seconds.

Channel Selection

Press Frequency SET button enter into the selection mode, LCD Window will blink and shows channel **CH 01**, press UP / DOWN button into desired channel or quit without setting in 10 seconds. To display current used channel, simply press UP / DOWN button.

UHF Audiolink Transmitter Module C 7203C

Carrier frequency	520-544MHz
Channels	96 (frequency dependant)
LCD status	LCD readout, LED indicators
Controls	set, up, down, volume
RF output	10 mW
Spurious emission	< 250 nW
Antenna	Built-in
Frequency response	70 Hz - 16 kHz
Wireless coverage	50 ~ 70 M