



MICRO2+

COMPACT HDMI MEDIA PLAYER



User Manual

HDTV Media Player

1. Features	3
2. Exterior View and Instruction for Remote Control	4
3 Technical Standard	5
4. Host physical connection diagram	6
5. Function Operation	7
5.1 System Operation	7
5.2 Select the storage \smart card\CDROM.....	7
5.3 Copy function	8
5.4 Movie playing	10
5.5 Music playing	8
5.6 Picture play	12
5.7 system personalized Settings	13
5.8 System Upgrade	15

1. Features

- ✧ **Video Decoding** : H.263、 H.264、 VC-1、 Mpeg1/2/4、 WMV
- ✧ **Audio Decoding** : DTS、 AC3、 FLAC、 AAC
- ✧ **HD Video** : Support VC-1(WMV9-HD)、 H.264、 Meg2-HD(1920*1080P)
- ✧ **Video play** : Support RM/RMVB-HD , MKV、 AVI、 TS-TP、 M2TS、 MOV、 VOB、 RM/RMVB、 FLV、 WMV etc video format ;
- ✧ **Music Play** : Support MP3, WMA, Ogg, AAC etc
- ✧ **Photo Browse** : Support JPEG、 GIF、 PNG、 BMP and other commonly used image format , Can support slide play , Support the rotation 、 Scaling 、 Moving Pictures ;
- ✧ **Card Reader Function** : SD/MMC Card, Support files play function ;
- ✧ **Output Interface** : AV、 HDMI1.3 、 DC 5V、 USB 、 SD/MMC ;
- ✧ **USB Function** : Support external USB storage devices, Such as U disk、 Card Reader、 mobile hard dish etc
- ✧ **Mobile HDD** : Support external removable hard disk storage
- ✧ **DVD Play** : **Playback the DVD disk by USB ports connected with External USB-DVD hard drive**
- ✧ **Subtitles** : **Support** ass、 ssa、 sub format
- ✧ **No limit hard disk Capacity** : **Support** FAT32/NTFS format ;
- ✧ **Support Multi-sound track video** : MKV、 TS、 TP、 WMV

2. Exterior View and Instruction for Remote Control

 


Button	Function
Power	Enter standby status. Press standby again, starting to enter operating conditions
Mute	Mute control
MOVIE	To enter movie review homepage
MUSIC	To enter music review homepage
PHOTO	To enter photo review homepage
TEXT	Not available on this model
VGA	Not available on this model
CVBS	Setup AV/HDMI output mode
YPBPR	Setup YPbPr output mode
HDMI	Setup HDMI output resolution
OSD	Display related information
16:9/4:3	Choose the suitable proportion of the screen
ZOOM	Zoom operation for the photo
AUDIO	Switch over TRK
MENU	Call up sub-menu under current page
Home	Return to Main Menu
Up	Upward
Down	Downward
Left	Left
Right	Right
Enter	Playing: Pause/Play; Select Menu: OK;
Function	GOTO playback time when playing video
Exit	Back to previous one eject dialog box, cancel the current display
SUB-T	Display the subtitle or not
ROTATE	Rotate photo display
VOL+	Increase volume
VOL-	Minus volume
⏮	Press to fast backward
⏭	Press to fast forward
⏩	Play next file
⏪	Play previous file
■	Stop playback
⏸	Press to Play/Pause
Mode	Setup playback mode
F1	Not available on this model

3. Technical Standard

	Decoding Format	Max resolution	Max Stream	Max Frames
Video	MPEG 1	1920*1080	100 Mbps	30fps
	MPEG 2		100 Mbps	
	MPEG 4-XVID		100 Mbps	
	H.264		70 Mbps	
	H.263		100 Mbps	
	WMV9/VC1		100 Mbps	
	RMVB		30 Mbps	
	Video Format: MKV, AVI, TS, TP, MP4/M4V, MOV, VOB, PMP, RM/RMVB, MPG, M2TS, FLV, WMV			
Audio	Bit Rate 30Kb/s ~ 320Kb/s			
	MP3, WMA, OGG, FLAC, APE, AAC, AC3, DTS			
	Stereo Audio Output: 2.0V +- 0.2Vp			
	Frequency Range : 20Hz-20KHz ≤2db(1KHz Odb)			
	SNR : More than 80dB(1kHz0dB)			
	Dynamic Range : Greater than 80 dB(1kHz0dB)			
	THD : 0.04%			
Photo	Audio Distortion : Lower than test level			
	Crosstalk : More than 80 dB(1kHz0dB)			
Interface	JPG, JPEG, BMP, GIF, PNG			
Storage	AV(Display resolution up to 720*576/720*480)			
	HDMI(Display resolution up to 1920*1080)			
	YPbPr(Display resolution up to 1920*1080)			
Size	USB for USB host to external storages			
	SD/MMC			
Weight	Naked Player: 63(L) * 75 (W) * 14 (H) mm			
Power	N.W.: About 0.07KG; G.W.: About 0.38KG			
Standard Accessories	Power adapter input: AC 100-240V, 50/60Hz;			
	Device power needed: DC 5V-2A			
	Power Adapter, Power cable, Remote control, User manual, 3 to 1 CVBS AV Cable (Subject to the real accessories and any changed without notice)			

4. Host physical connection diagram

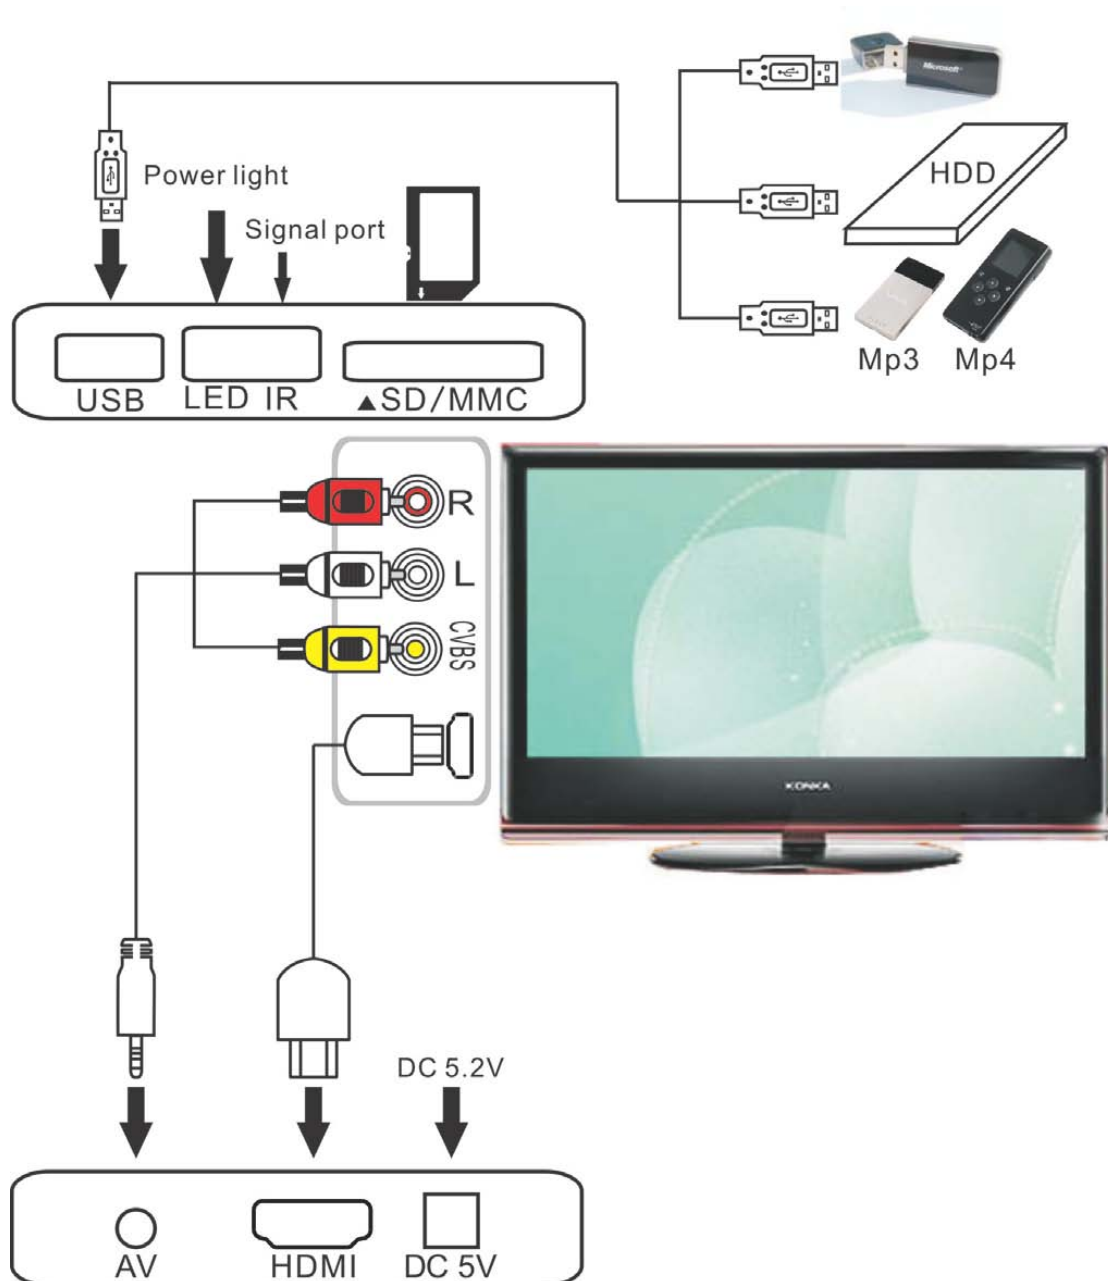


5. Function Operation

5.1 System Operation


Plug in and show the initialized information. After a second it accesses to the main menu, show as below picture 1 Note: Please attempt the following operation if you can not access the regular interface: Switch over the mode between AV and HDMI by remote control in line with the connecting mold on your TV, until the regular menu turn up.

 Press “**enter**” key to access movie/music/photo/explorer/setting; choose the media file from the HDD and SD card. It will stream the video from media file; choose the media file you want to play. Press “**enter**”, or press “**EXIT**” to step back the last step, Press “**HOME**” back to the Main interface.

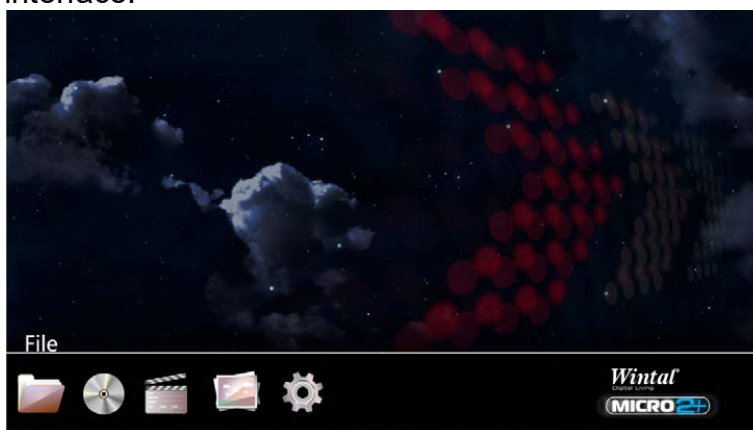

1

 5.2 Select the storage \smart card\CDROM

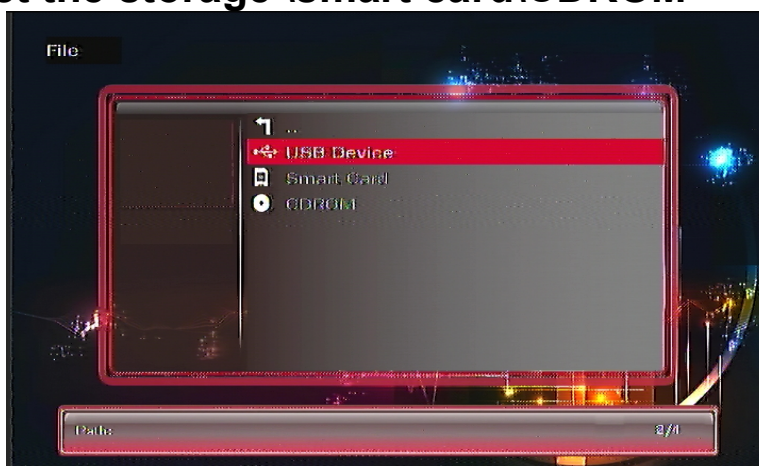

2

USB Device: It shows that it is external HDD and mobile device

 
Smart card: It shows that you insert the memory card

CDROM: It show that you plug in DVD drive

Press “**◀◀**”/“**▶▶**” key you can page turning in the file list

Press “**EXIT**” key back to the last catalog

When it read the HDD and memory card, access to a file, you will access to a disc, you will see all the files in the disc .Refer to picture 3

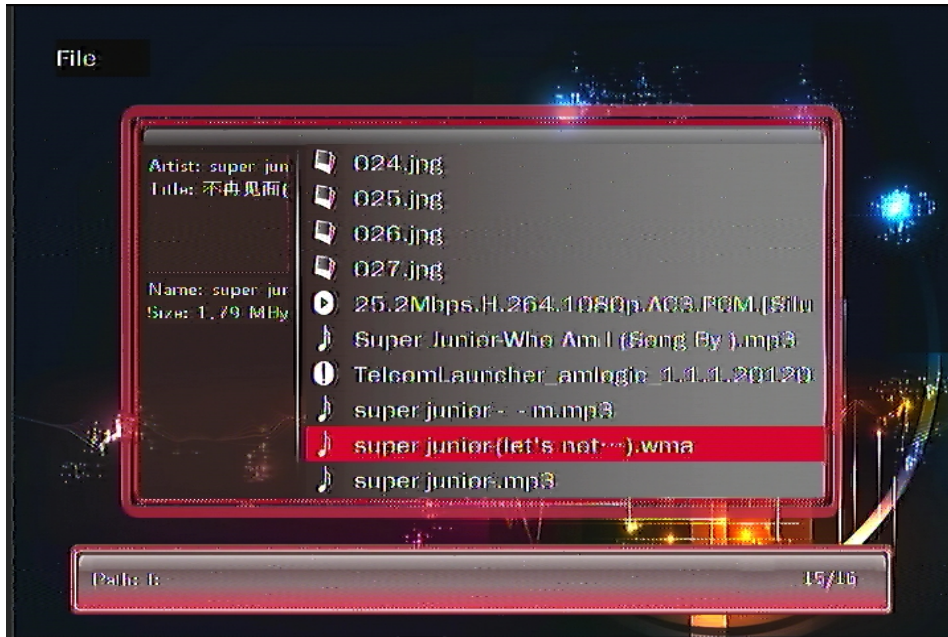

3

5.3 Copy function

5.3.1 Access to Movie/MUSIC/picture file, press **"UP"** / **"DOWN"** , choose the file you want to copy.

 
5.3.2 Press **"OSD"** , it will display the operation menu on the right screen, press **"UP"** / **"DOWN"** choose copy item ;

5.3.3 Press **"EXIT"** , go to the place where you want to copy. press **"OSD"** button , it will display the operation menu on the right screen. Press **"UP"** / **"DOWN"** choose the paste item, press **"enter"**

5.3.4 It will display the progress bar, it means copy completely when the progress bar display 100% Warm reminder: it will display the file after you exit the current file and access to the file again.


5.4 Music playing

5.4.1 Choose the **"MUSIC"**, it will display the first 9 songs at the first page; go to the next page to find the other songs. Show as below picture 8

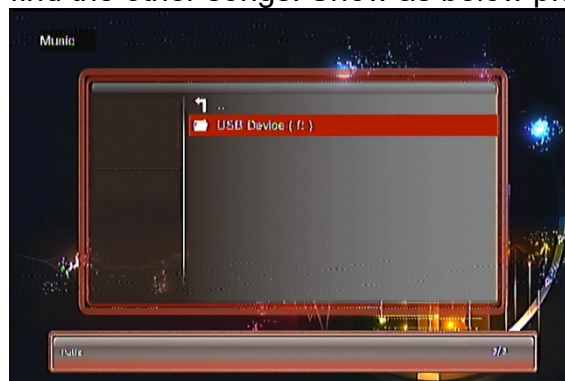

8

 5.4.2 Press “UP”/“DOWN” to move the cursor, choose the music file you want to play. It will show single, title, name, size information at the left side and show the file address at the bottom. Show as below picture 9

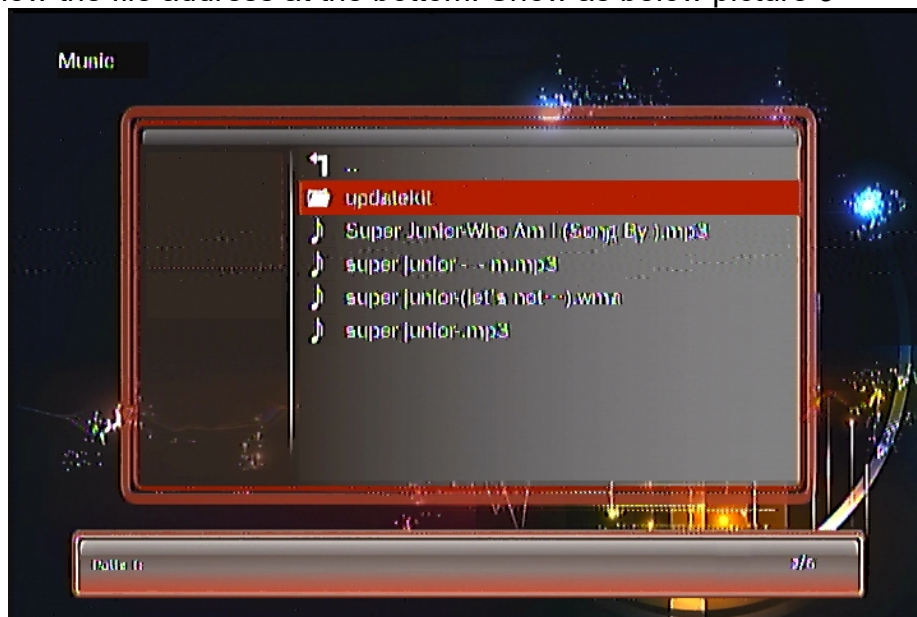

9

5.4.3 Press “Enter” to confirm which music you choose. It will show the play bar at the middle of the display. And also display the lyric. The music name, singer information is shown at the left side. There is operation menu at the bottom like picture 10.

5.4.4 Press **Volume +/-** button, you can adjust the volume for the music file:

5.4.5 Press **OSD** button. it will show the operation information status bar on the top screen ,including the EQUALIZER/LRC/color /display mode, press “UP”/“DOWN”, press “Enter” button choose the item ,press **exit** button quit the current status



10

 
5.4.6 Press **“MODE”** button setup the playing mode, for example, Order of play, random play, single play, single cycle, all cycle

5.4.7 Press **“EXIT”** button back to the previous step, press **“MENU”** button System is still running in the background, press **“play/pause”** button or **“Enter”** button;

5.4.8 Also can press the **“explorer”** button to enter, also can press **“MUSIC”** button to Switch directly to music option


5.5 Movie playing

5.5.1 choose the **“movie”** item ,it lists all the movie media files according to the file structure ,press **“Enter”**, It will list all the file .If the media file is up to 9 file, It will be automatically shown next page. Refer to picture 4.

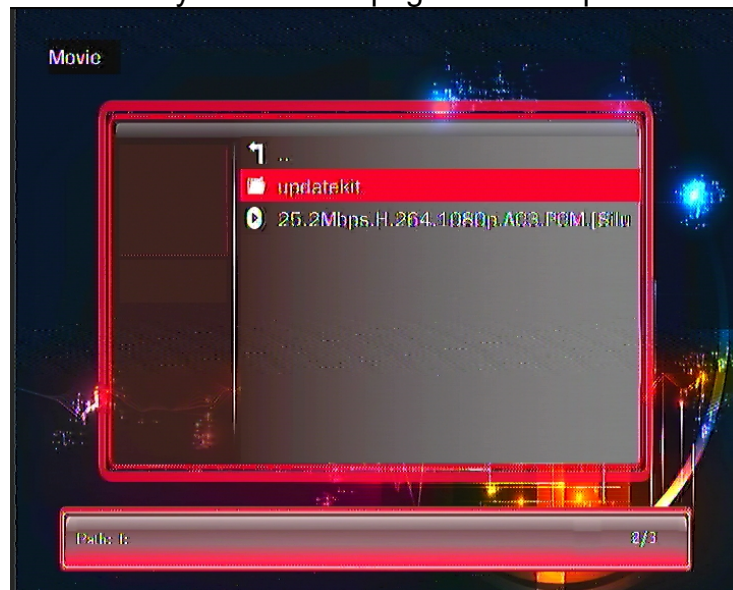

4

 5.5.2 Press **“UP”/“DOWN”** key remove the cursor to choose the video file you want to play, It will show the file attributes on the right side such as title, size of the file. Below the screen it will show that file route. Refer to picture 5

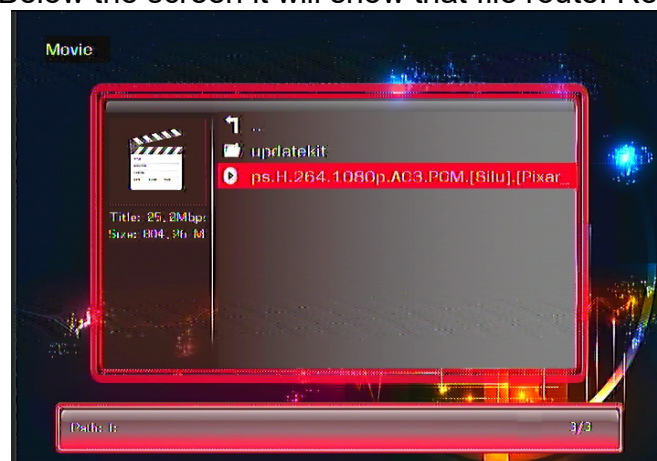

5

5.5.3 Press **“Enter”** playback the file. You can adjust the volume by volume key -/+

5.5.4 Press **“⏪”/“⏩”** choose the last file and next file

 
5.5.5 Press “◀◀”/“▶▶” fast backward and fast forward by 1.5*、2*、4*、8*、16*、32*

5.5.6 Press “16 : 09/4 : 3” key adjust the proportion of the screen ,such as 4 : 3、Video Full Screen、Screen Full Screen、Default Size


5.5.7 Press “Audio” key switch to output of sound track

5.5.8 Press “repeat” key set up the playback mold, such as Random、Repeat One、Repeat All

5.5.9 When playback file ,press “FUNCTION” key ,It will show the dialog box as follows ,input the figure by “◀”/“▶” key ,press “◀”/“▶” key ,you can move the cursor to the hour, minute, second, press “▲”/“▼”key adjust the time you want ,then press “Enter” ,refere to picture 6 ,It will playback the film at 01:12:48 timing.

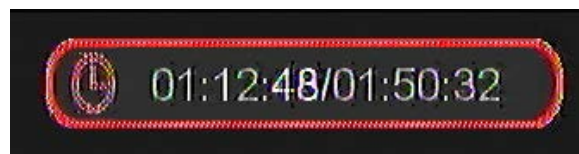

 5.5.10 Copy the film file and the subtitle file into the same file or the same directory. It will display the external subtitle file automatically when playback the film file, no need to manual operation, Press “OSD” button, It will show the file information on the top of the screen. It will display the status bar of the operation, including the turn on/OFF/subtitle/color/frame color/size/character encoding, press“▲”/“▼”,then OK ,press **exit** button quit the current state. Refer to picture 7.

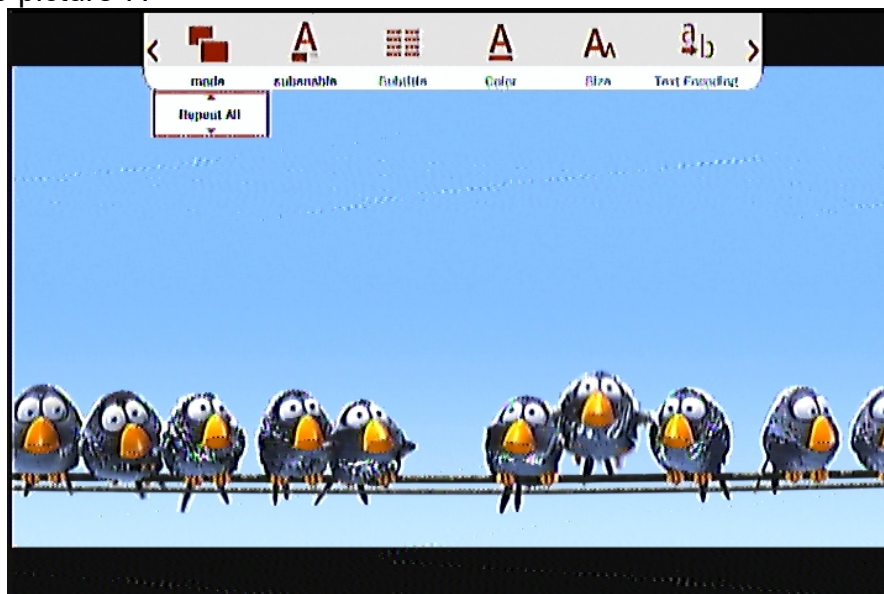

7

5.5.11 Press **SET UP** button .You can set up the system parameter when playback the film, after finish set up, press **Exit** button, and back to the film interface.

5.5.12 Press “PAUSE/PLAY” key or “ENTER” key to pause or playback the file, press “EXIT” key back the last step, press “Menu” key back to the main menu.

5.5.13 You can also access to from “explore” item, you can press “MOVIE”

key switch to the movie directly.

5.5.14 AUTO play: Play video files repeatedly in root directory after player been turned on. You can set this function on or off in setup.

5.6 Picture play

5.6.1 When select “**PHOTO**” , it will list all the Possible be played files and according to the document structure of storage equipment ,press “**ENTER**” ,display all file and foders list , and display the current 9 files and folders , more files and folders will automatic diplay on the next page ,as picture 11 below .



11

5.6.2 Press “**UP**”/“**DOWN**” move the highlight to select the picture file you want to play , and it will display the attribute specification ,such as : title, size; The path of files and folders will be display below the screen .

5.6.3 Press “**ENTER**” Full screen play , the system default into slides circulation play state :

5.6.4 Press “**◀**”/“**▶**” play last or next picture .

5.6.5 Press “ **Rotate** ” , can make a single picture for 90 ° , 180 ° , 270 ° rotate play

 
5.6.6 Press “**MENU**” , the operation statu bar will be display on the above screen , options as : switching mode, played interval, background music , press “**UP**”/“**DOWN**” and select , press “**Enter**” into into the option you selected , press “ **exit** ”key exits current operation ,as Picture 12

5.6.7 Press “**play/pause**” key or “**⏸**” button to pause / play slides, Press the “**menu**” to return to the main interface

5.6.8 Press “**PHOTO**” key in any interface, it can be changed into picture option,also can enter from “**Files**”.

5.7 system personalized Settings

The user can make any personalized Settings according to your own Hobbies and actual using . Firstly , press “**setting**” key on the remote controller , entry into setting interface , the window will display kinds function menu ,press “**UP**”/“**DOWN**” select the main menu need to setting , press “**ENTER**” confirm ,press “**UP**”/“**DOWN**” to select submenu , press “**ENTER**” confirm to applicate the setted option ; Press the “**exit** ” button exits current operation, press the “**menu**” key return to the main interface.

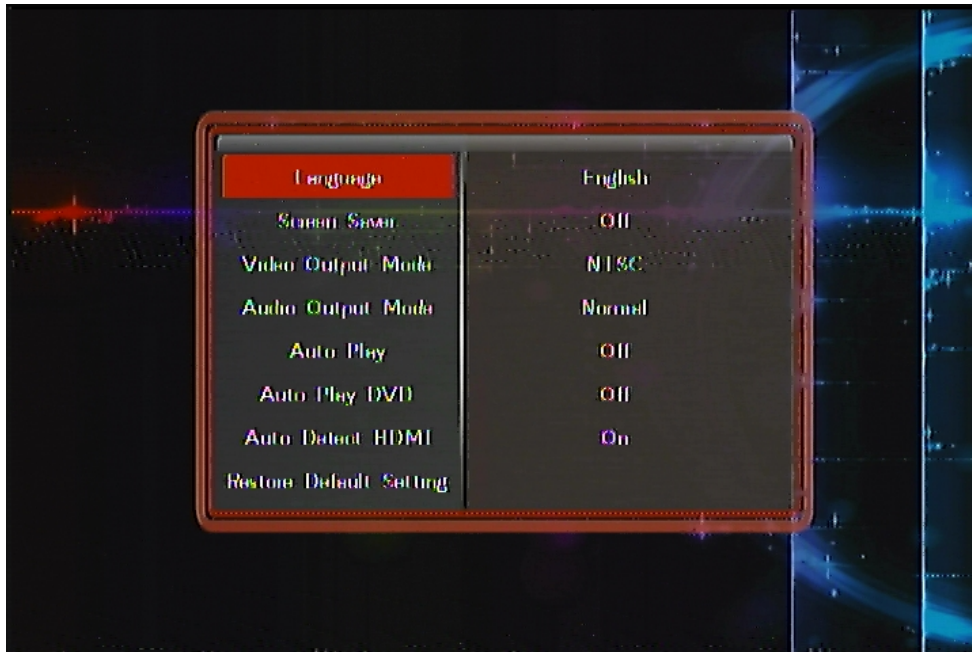

Software menu functions as follows :

Language: simplified Chinese character, traditional Chinese character, English, Japanese, Korean, German, Spanish, French, Italian, Portuguese, DUTCH, Russian, polish, Turkish and the Czech .

Screen protection : 1 minute, 2 minutes and 5 minutes, 10 minutes, 30 minutes, 1 hour, two hours, shut down

Video ouput mode : PAL、 NTSC、 HDMI-720P-50HZ ,HDMI- 720P-60HZ、 HDMI-1080P-50HZ、 HDMI-1080P-60HZ、 HDMI-1080I-50HZ、 HDMI-1080I-60HZ

Audio output mode : Normal、 SPDIF LPCM、 SPDIF RAWDATA、 Analog Audio

Automatic playback: close, video, music, pictures

Automatic playback DVD: close, open

Warm prompt: automatic playback files need to copy to external hard drive (a division), root directory of U disk and SD card)

Automatic detection HDMI: close, open

 
Recovery factory set

System information: software version number

5.8 System Upgrade


5.8.1 Copy the upgrade file (xxx.img) to external mobile equipment root directory or smart card root directory.

5.8.2 Press “LEFT”/“RIGHT” to select “**folder** ” option on the main interface .as picture 13

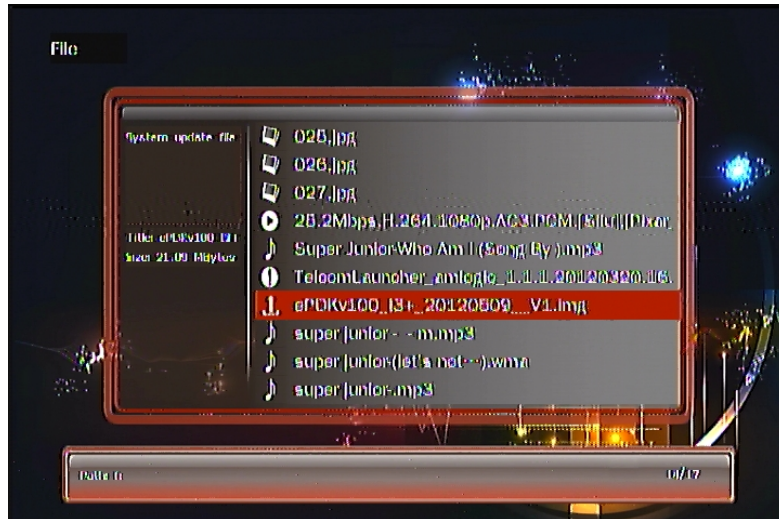

13

 5.8.3 Then press “UP”/“DOWN” to select “XXX.img” Upgrade file , press “”, it’s will come out a window as picture 14 , pls selet “Yes ” confirm upgrade .

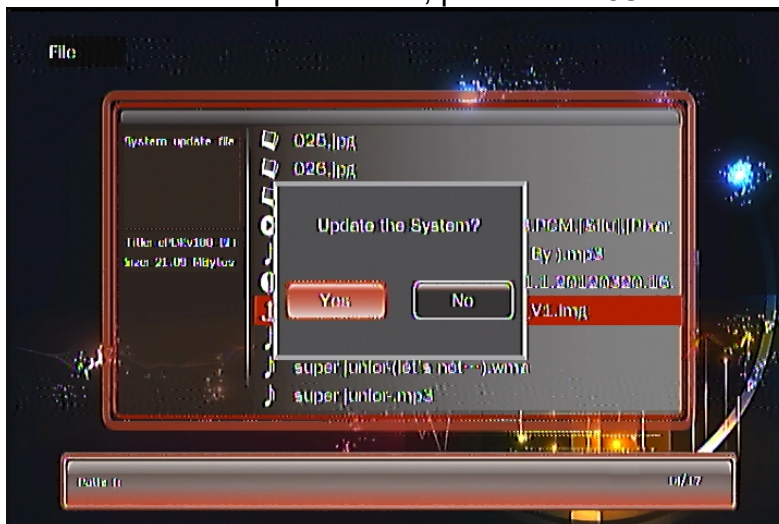

14

5.8.4 Original system files will be delete during upgrade time , To update the firmware, upgrade progress shows in the middle of the screen .as picture 15 .



15

 
After finish upgrade, the blanck screen will last about 2 minutes ,then it will Automatic reboot to the main interface and automatic to recognize the connected video output. Upgrade existing can` t power on risk, please consider carefully

Warm prompt : During the upgrade time , please don't cut off the power supply, otherwise, it will cause the firmware upgrade failure and lead to machine fault; upgrade existing didn't turn on risk,

MICRO 2 EVO NEW FEATURE


1. Real Time Clock

Thanks for the built-in button battery, micro2 EVO allows to set time in system, save and keep time runs as real time even when plug out the power.

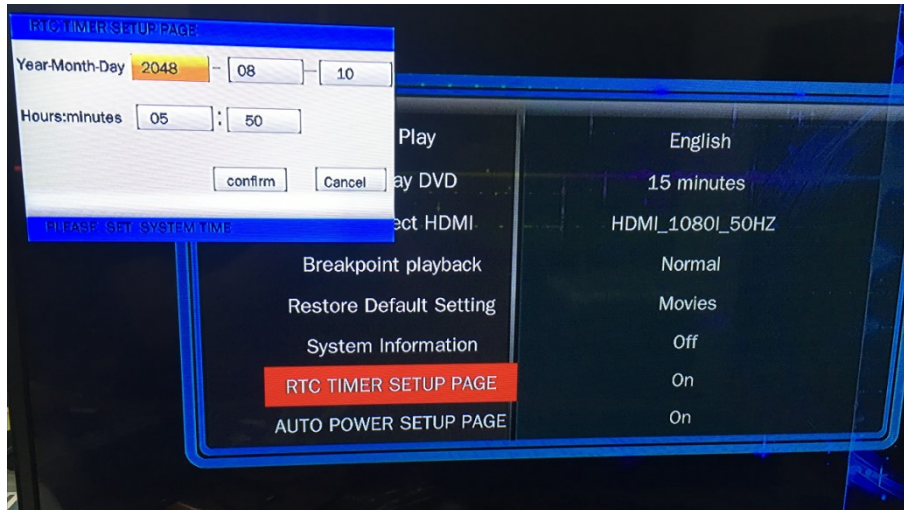

2. Auto on / off

 After set the time in Micro 2 EVO, you can set a schedule for micro 2 EVO that turn on/off automatically. And with the auto playback function, Micro 2 EVO will turn on to playback and turn off on time as your schedule without any operation (power adapter plug in is needed).

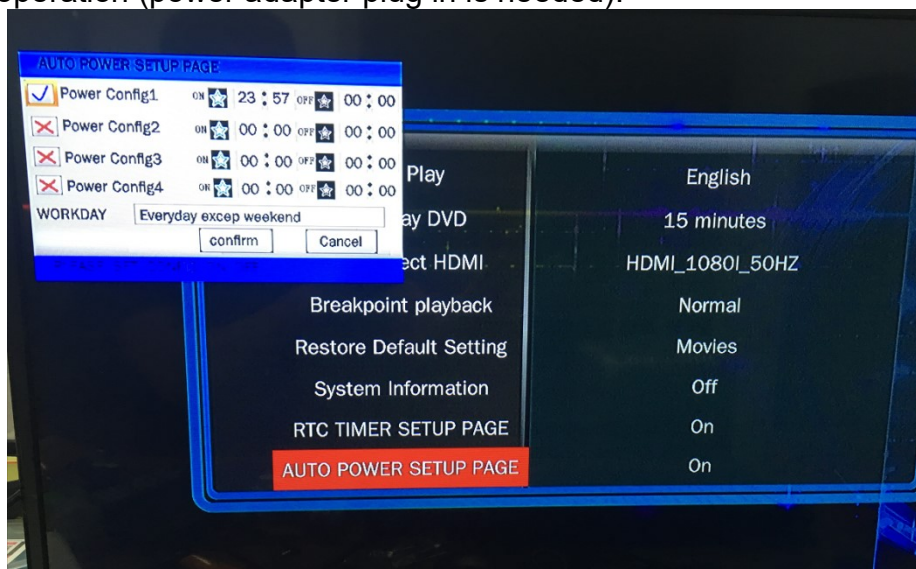

Q&A:

No display on TV:

1. Check the LED light, red light means standby, blue light means on and working, make sure the light is blue.
2. Check your TV channel, if the TV is set to HDMI, press the HDMI button on remote control. If the TV is set to AV, press CVBS button on remote control.