

# vIRsa Mouse IR Emitter Installation Instructions



5775 12th Ave East • Suite 180 • Shakopee, MN 55379  
www.rticorp.com


70-210071-18 V1.0

- 1) Choose which holder (red or clear) that you will be using.
  - Use the red holder if you want the flashing LED covered.
  - Use the clear holder if you want to see the flashing LED.
- 2) Peel the adhesive film protective backing off.




vIRsa Mouse holder  
(Bottom view)

- 3) Locate the IR receiver window on equipment that is going to be controlled.
- 4) Place the vIRsa Mouse holder over IR receiver on equipment, adhesive film side down.

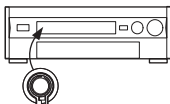

- 5) Firmly press down on adhesive film around the entire outside edge, insuring it is securely mounted to surface of equipment.


**NOTE: Adhesive may require up to 24 hours to completely bond with surface.**

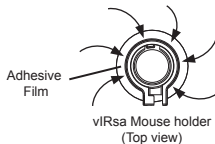

Adhesive  
Film

vIRsa Mouse holder  
(Top view)

- 6) Insert the vIRsa Mouse emitter into the holder with **star pattern down (IR emits from star side).**



vIRsa Mouse  
IR emitter


Emitter  
alignment  
groove



Wire clip

vIRsa Mouse holder

- a. Tilt the top edge of the emitter down and place it into the holder aligning the groove with the alignment tab.
- b. Press the bottom edge (nearest the cable) into the holder and snap the cable into the wire clip.

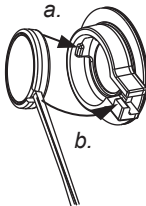

- 7) Plug vIRsa Mouse into RTI control Processor or IR repeating system.